Safety & Productivity Solutions

## *How to add a [STX] Prefix and [ETX] Suffix for serial interface?*

Article number 000018339

Article Summary:

Scan the codes below:

Prefix <STX>



Suffix <ETX>



This is an entry from the Honeywell Sensing & Productivity Solutions Knowledge base. As part of our ongoing effort to improve and enhance the quality of the articles, we ask you to inform us if you feel that we can improve on the content of this article. Please send an email to: hsmsupportsolutions @honeywell.com